

KEY NO.	HOLLEY NO.	A.M. NO.	DESCRIPTION	PER CAR
9	5R-425	320 3108	⊙φ Float Bowl Clamp Screw and Lock Washer	4
	5R-441	320 3177	φ Dashpot Lever Screw (Not shown)	1
	5R-447	320 3178	φ Dashpot Lever Adjusting Screw (Not shown)	1
10	5R-534	320 3110	φ Throttle Stop Screw	1
11	5R-571	320 3115	φZ Throttle Body Screw and Lock Washer	2
12	5R-641	320 3120	∅ φ Economizer Body Screw and Lock Washer	3
13	5R-731	320 6312	Thermostat Housing Screw	3
14	5R-773	320 3124	⊕φ* Choke Plate Screw and Lock Washer	2
15	5R-806	320 3126	⊕φ Choke Housing Screw and Lock Washer	2
16	6R-2323A		Main Body and Plugs Assembly	1
19	8R-453	315 3999	Z#† Flange Gasket	1
20	8R-482		+ Fuel Inlet Seat Gasket	1
21	8R-534	320 2203	#+∅ Economizer Body Gasket	1
22	8R-568		⊕#† Choke Housing Gasket	1
23	8R-579		⊙#† Float Bowl Gasket	1
24	8R-644		⊕#† Choke Thermostat Housing Gasket	1
25	8R-864		Z#† Throttle Body Gasket	1
26	9R-70		Z Throttle Plate	1
27	10R-885A		Z Throttle Lever and Shaft Assembly	1
	11R-612A		Dashpot Lever Assembly (Not shown)	1
28	12R-2694A		Z Throttle Body and Shaft Assembly	1
29	15R-36	320 2205	Z* Idle Adjusting Needle	1
30	16R-316A	320 2946	⊙ Float and Lever Assembly	1
31	18R-81AS	320 3495	#* Fuel Inlet Valve and Seat Assembly	1
32	19R-219	320 6401	Spark Fitting	1
33	19R-223	320 6362	Fuel Inlet Fitting	1
34	22R-40-51	320 3165	Main Jet	1
34	22R-40-52		° Main Jet (For Positive Ventilation Cars Only)	1
35	25R-166A	320 2213	∅#* Economizer Stem Assembly	1
36	25R-167A	320 6407	∅ Economizer Body Cover Assembly	1
37	27R-204	320 6316	⊕#† Choke Shaft Seal	1
38	27R-229	320 6317	+ Fuel Inlet Seat Seal	1
40	28R-94	320 3181	∅φ* Pump Discharge Ball	1
41	28R-94	320 3181	∅φ* Pump Push Rod Sleeve Ball	1
42	33R-368	320 3207	Z Pump Operating Link	1
43	34R-1374	320 3707	⊙ Float Bowl	1
44	34R-2757		⊕ Choke Housing Plate	1
45	34R-3014A		⊕ Choke Housing and Plugs Assembly	1
46	34R-3386A	320 3713	Main Well and Economizer Body and Plugs Assembly	1
47	35R-347A	320 2887	∅#* Pump Diaphragm and Rod Assembly	1
48	36R-169	320 3189	⊙φ* Float Retainer	1
49	36R-225	320 3190	⊕φ* Choke Plate Link Retainer	1
50	38R-108	320 3191	Zφ Idle Adjusting Needle Spring	1
51	38R-110	320 3192	φ Throttle Stop Screw Spring	1
52	38R-395	320 3193	∅φ Pump Return Spring	1
53	38R-452	320 3194	∅φ Pump Operating Spring	1
54	38R-759	320 3201	⊕φ Choke Lever Spring	1
55	39R-11	320 4409	⊕ Choke Shaft Nut	1
56	39R-166	320 6322	⊕ Choke Pick Up Lever Nut	1
57	40R-283	320 6323	Pump Discharge Valve Weight	1
58	41R-338A	320 6324	‡ Fast Idle Cam Assembly	1
59	42R-200		∅ Pump Push Rod Sleeve	1
	46R-10	320 6325	Dashpot Lock Washer (Not shown)	1
60	46R-252	320 6326	⊕ Choke Shaft Nut Lock Washer (Shakeproof)	1
	46R-347		° Economizer Shim (For Positive Ventilation Cars Only)	2
61	46R-529	320 6327	⊕ Choke Shaft Seal Washer	1
62	47R-160A	320 3224	⊕ Choke Therm. Hsg. Assy. (Cp) (Ident. by "R" on Cover)	1
63	48R-183	320 3228	Zφ* Pump Operating Link Cotter Pin	1
64	49R-128	320 3229	⊕φ Choke Thermostat Housing Clamp	3
	58R-49A	320 3209	Dashpot Assembly (Not shown)	1
65	59R-46		⊙ Fuel Inlet Baffle	1
66	63R-233A	320 6328	Pump Operating Lever Assembly	1
67	75R-37	320 3240	Zφ Pump Operating Lever Retainer	1