

GROUP 4

KEY NO.	HOLLEY NO.	A.M. NO.	DESCRIPTION	PER CAR
4	4R-582		W Choke Pick-Up Lever	1
5	4R-681A		W Choke Thermostat Lever, Link and Piston Assembly	1
6	5R-4	320 3101	φ*X Throttle Plate Screw	2
7	5R-420	320 3106	φ Main Well & Economizer Body Screw & LW (Short)	2
8	5R-421	320 3107	φ Main Well & Economizer Body Screw & LW (Long)	3
9	5R-425	320 3108	φ# Float Bowl Clamp Screw and Lock Washer	4
10	5R-534	320 3110	φ Throttle Stop Screw	1
11	5R-571	320 3115	φZ Throttle Body Screw and Lock Washer	2
12	5R-641	320 3120	φ# Economizer Body Screw and Lock Washer	3
13	5R-731	320 6312	W Thermostat Housing Screw	3
14	5R-773	320 3124	φ* Choke Plate Screw and Lock Washer	2
15	5R-806	320 3126	φW Choke Housing Screw and Lock Washer	2
16	6R-2050A		Main Body and Plugs Assembly	1
17	7R-48-3	320 6313	Pump Discharge Ball Retainer	1
18	7R-274	320 6314	Pump Inlet Ball Retainer	1
19	8R-453	315 3999	#+Z Flange Gasket	1
20	8R-482		+ Fuel Inlet Seat Gasket	1
21	8R-534	320 2203	#*# Economizer Body Gasket	1
22	8R-568		#+W Choke Housing Gasket	1
23	8R-579		#+@# Float Bowl Gasket	1
24	8R-644		#+W Choke Thermostat Housing Gasket	1
25	8R-864		#+Z Throttle Body Gasket	1
26	9R-70		Z Throttle Plate	1
27	10R-885A		Z Throttle Lever and Shaft Assembly	1
28	12R-2719A		Z Throttle Body and Shaft Assembly	1
29	15R-36	320 2205	*Z Idle Adjusting Needle	1
30	16R-316A	320 2946	# Float and Lever Assembly	1
31	18R-62AS	320 2902	#* Fuel Inlet Valve and Seat Assembly	1
32	19R-219	320 6401	Spark Fitting	1
33	19R-223	320 6362	Fuel Inlet Fitting	1
34	22R-40-55	320 3166	Main Jet	1
34	22R-40-56	320 3250	° Main Jet (For Positive Ventilation Cars Only)	1
35	25R-166A	320 2213	#*# Economizer Stem Assembly	1
36	25R-167A	320 6407	# Economizer Body Cover Assembly	1
37	27R-204	320 6316	#+W Choke Shaft Seal	1
38	27R-229	320 6317	+ Fuel Inlet Seat Seal	1
39	28R-6	320 6318	* Pump Inlet Ball	1
40	28R-94	320 3181	φ*W Pump Discharge Ball	1
41	28R-94	320 3181	φ*W Pump Push Rod Sleeve Ball	1
42	33R-344	320 6319	* Pump Operating Link	1
42	33R-368	320 6320	@Z Pump Operating Link	1
43	34R-1374	320 3707	# Float Bowl	1
44	34R-2757		W Choke Housing Plate	1
45	34R-3014A		W Choke Housing and Plugs Assembly	1
46	34R-3016A	320 3710	Main Well and Economizer Body and Plugs Assembly	1
47	35R-347A	320 2887	#*W Pump Diaphragm and Rod Assembly	1
48	36R-169	320 3189	φ*#@# Float Retainer	1
49	36R-225	320 3190	φ* Choke Plate Link Retainer	1
	37R-135		@ Pump Pivot Stud	1
50	38R-108	320 3191	φZ Idle Adjusting Needle Spring	1
51	38R-110	320 3192	φ Throttle Stop Screw Spring	1
52	38R-395	320 3193	φW Pump Return Spring	1
53	38R-452	320 3194	φW Pump Operating Spring	1
54	38R-759	320 3201	φ Choke Lever Spring	1
55	39R-11	320 4409	W Choke Shaft Nut	1
56	39R-166	320 6322	W Choke Pick-Up Lever Nut	1
57	40R-283	320 6323	Pump Discharge Valve Weight	1
58	41R-338A	320 6324	Fast Idle Cam Assembly	1
59	42R-200		@W Pump Push Rod Sleeve	1
60	46R-252	320 6326	W Choke Shaft Nut Lock Washer (ShakeProof)	1