

| CARTER<br>NO. | A.M.<br>NO. | DESCRIPTION  | PER<br>CAR |
|---------------|-------------|--|------------|
| 61-148        |             | Step-up piston spring (Use 61-226)   |            |
| 61-226        | 320 3848    | * Step-up piston spring  | 1          |
| 61-291        | 320 3850    | Throttle lever adjusting screw spring  | 1          |
| 61-298        | 320 3840    | Fast idle cam spring   | 1          |
| 61-426        | 320 3844    | Idle adjustment screw spring   | 1          |
| 61-657        | 320 3855    | Pump spring (upper) (not shown)  | 1          |
| 61-658        | 320 3856    | Pump spring (lower)  | 1          |
| 63-58         | 320 3818    | φ Coil housing retainer  | 3          |
| 63-208        | 320 3821    | φ Float lever pin retainer   | 1          |
| 63-209        | 320 3822    | φ Metering rod retainer  | 1          |
| 63-213        | 320 3823    | φ Discharge ball check retainer (not shown)  | 1          |
| 63-251        | 320 3824    | φ Pump spring retainer   | 1          |
| 64-234S       |             | Pump plunger and rod assembly (Use 64-233S)  |            |
| 64-233S       | 320 2941    | ## Pump plunger and rod assembly   | 1          |
| 75-1512S      |             | Metering rod assembly (Use 75-1552S)   |            |
| 75-1552S      |             | * Metering rod assembly .076" x .072" x .052" Standard                                     | 1          |
| 101-136       | 320 6431    | Coil housing attaching screw   | 3          |
| 101-160S      | 320 6432    | Air horn attaching screw and washer assembly   | 9          |
| 101-365       |             | Throttle lever adjusting screw   | 1          |
| P101-378      | 320 6471    | Dust cover screw   | 2          |
| 101-393       | 320 6472    | Throttle shaft screw   | 1          |
| 101-419       | 320 6473    | Throttle valve attaching screw (not shown)   | 2          |
| 114-161S      | 320 6474    | Throttle shaft arm and link assembly (contains 1 of 114-160<br>and 1 of 117-186 assembled) | 1          |
| 115-241       |             | Connector rod (Use 115-332)  |            |
| 115-332       | 320 6475    | Connector rod  | 1          |
| 116-25        | 320 3825    | φ Pump discharge check ball (not shown)  | 1          |
| 117-168       |             | Fast idle link (Use 117-183)   |            |
| 117-183       | 320 6476    | Fast idle link   | 1          |
| 117-185       | 320 6477    | Pump lifter link   | 1          |
| 118-178       |             | Dust cover   | 1          |
| 120-161       |             | Metering rod jet (Use 120-171)   |            |
| 120-171       |             | * Metering rod jet (.1065")  | 1          |
| 121-78        |             | ** Coil housing gasket   | 1          |
| 121-263       |             | *† Dust cover gasket   | 1          |
| 121-344       |             | Body gasket (Use 121-339)  |            |
| 121-339       |             | ** Body gasket   | 1          |
| 122-119S      |             | Pump intake check assembly (Use 122-108S)  |            |
| 122-108S      | 320 3863    | Pump intake check assembly   | 1          |
| 136-228       | 320 3828    | φ Pump shaft washer  | 1          |
| 150-62        | 320 3829    | φ Choke piston pin   | 1          |
| 150A-10       | 320 3830    | φ Pin spring   | 1          |
| 160-133       | 320 6479    | Step-up Piston   | 1          |
| 160-138       | 320 3866    | Choke piston   | 1          |
| 170UN-61S     |             | Thermostatic coil and housing assembly (Use 170AF-61S)                                     |            |
| 170AF-61S     | 320 6268    | Thermostatic coil and housing assembly   | 1          |
| 181-282S      |             | Fast idle cam assembly (Use 181-234S)  |            |
| 181-234S      | 320 6480    | Fast idle cam assembly   | 1          |
| 186-24        | 320 6481    | Choke baffle plate   | 1          |
| 230-10        |             | * Power jet (.076)   | 1          |