

GROUP NO. — DESCRIPTION — YEAR and MODEL	PRIMARY GROUP NO.	PER CAR	PART NO.	CODE
1. 136 ROD ASSEMBLY, Connecting (Incl. Cap, Bolts And Nuts)				
60 Thru 64 01 (Note 1.136-1 Type 1): 60 Thru 64 10 (OHV-196-Note 1.136 Type 1)		6	314 5611	
64 01 (Note 1.136-1 Type 2): 65 01 (LHE)(OHVC-196): 64 10 (OHV-196-Note 1.136-1 Type 2)		6	317 4474	
65 01-80 (OHV-232): 64-65 10 (OHV-232).....		6	317 2341	
65 01-10 (OHV-199).....		6	317 3210	
60 Thru 65 10-20-80 (V8)		8	314 5296	
ATTACHING PARTS				
Connecting Rod Bearing Cap To Rod				
BOLT, Kit..... 60 Thru 65 01 (LHE)(OHVC-196): 60 Thru 64 10 (OHV-196)...(Incl. Nut).....	1.141	12	311 2743	
BOLT, Kit..... 65 01-80 (OHV-232): 65 01-10 (OHV-199): 64-65 10 (OHV-232)...(Incl. Nut).....		12	320 6253	
BOLT, Kit..... 60 Thru 65 10-20-80 (V8)...(Incl. Nut).....	1.141	16	320 6252	
BOLT, Hexagon..... 65 01-80 (OHV-232): 64-65 10 (OHV-232): 65 01-10 (OHV-199).....		12	317 2326	
BOLT, Hexagon..... 60 Thru 65 10-20-80 (V8)..... (Use 320 6252)	1.141	16	314 5535	
NUT, Hexagon..... 60 Thru 65 01-10 (Six): 65 80 (OHV-232).....	1.141	12	314 9556	
NUT, Hexagon..... 60 Thru 65 10-20-80 (V8)	1.141	16	314 9590	
1. 138 BEARING, Connecting Rod (Incl. Upper And Lower)				
(Std.) 60 Thru 65 01 (LHE)(OHVC-196): 60 Thru 64 10 (OHVC-196)		6	320 3879	
(Std.) 61 Thru 64 10 (OHVA).....		6	320 3889	
(Std.) 65 01-80 (OHV-232): 64-65 10 (OHV-232): 65 01-10 (OHV-199).....		6	320 4978	
(Std.) 60-61 20.....		8	311 9606	
(Std.) 60 Thru 65 10-80 (V8).....		8	320 1231	
(-.001) 60 Thru 65 01 (LHE)(OHVC-196): 60 Thru 64 10 (OHVC-196)..... (Replaces 311 7201)		6	320 3880	
(-.001) 61-62 10 (OHVA).....		6	320 2672	
(-.001) 63-64 10 (OHVA).....		6	320 3890	
(-.001) 65 01-80 (OHV-232): 64-65 10 (OHV-232): 65 01-10 (OHV-199)		6	320 4979	
(-.001) 60-61 20		8	311 9612	
(-.001) 60 Thru 65 10-80 (V8)		8	320 1232	
(-.002) 60 Thru 62 01: 60 Thru 62 10 (OHVC)		6	311 4603	
(-.002) 63 Thru 65 01 (LHE)(OHVC-196): 63-64 10 (OHVC-196)		6	320 3881	
(-.002) 61-62 10 (OHVA).....		6	320 2673	
(-.002) 63-64 10 (OHVA).....		6	320 3891	
(-.002) 65 01-80 (OHV-232): 64-65 10 (OHV-232): 65 01-10 (OHV-199)		6	320 4980	
(-.002) 60-61 20		8	311 9614	
(-.002) 60 Thru 65 10-80 (V8)		8	320 0821	
(-.010) 60 Thru 65 01 (LHE)(OHVC-196): 60 Thru 64 10 (OHVC-196)..... (Replaces 311 4604)		6	320 3882	
(-.010) 61 Thru 64 10 (OHVA)		6	320 3892	
(-.010) 65 01-80 (OHV-232): 64-65 10 (OHV-232): 65 01-10 (OHV-199)		6	320 4981	
(-.010) 60-61 20		8	311 9616	
(-.010) 60 Thru 65 10-80 (V8)		8	320 1234	
(-.012) 60 Thru 65 01 (LHE)(OHVC-196): 60 Thru 64 10 (OHVC-196)..... (Replaces 320 3187)		6	320 3883	
(-.012) 61-62 10 (OHVA).....		6	320 2675	
(-.012) 63-64 10 (OHVA).....		6	320 3893	
(-.012) 65 01-80 (OHV-232): 64-65 10 (OHV-232): 65 01-10 (OHV-199)		6	320 4982	
(-.012) 60-61 20		8	311 9618	

NOTE 1.136-1: Two Types of Connecting Rods were installed on 64 01 and 64 10 (OHV-196). They can be identified as follows:

- Type 1: The Connecting Rod at Piston End is 13/16" wide.
 Type 2: The Connecting Rod at Piston End is 1-7/64" wide.