

GROUP NO. — DESCRIPTION — YEAR and MODEL	PRIMARY GROUP NO.	PER CAR	PART NO.	CODE
HARNESS, To Solenoid And Starter Relay				
62 01 (WES-Note 3.022-1 Type 2): 63 01 (WES)	1	316 5764	
64 01 (LHD-WES)	1	317 1123	
63-64 10 (WES)	1	316 8175	
WIRE, Ignition Switch To Neutral Safety Switch				
63 Thru 65 10 (WAT-LAW)(WES-LAW): 63 Thru 65 80 (V8-WAT-LAW).....	1	316 8125	
64-65 10-80 (WAT-WCGS-WAW)	3.022	1	317 1137	
WIRE, Ignition Switch To Circuit Breaker				
64 01 (Accessory Side).....	23.320	1	317 1131	
64 01 (Battery Side)	23.230	1	317 1134	
65 01-10-80 (Accessory Side).....	1	317 6543	
65 01-10-80 (Battery Side).....	1	317 6542	
WIRE, Ignition Switch To Windshield Wiper Switch Circuit Breaker				
64-65 01 (WEW): 65 10-80 (LHD-WEW-Has A Female Angle Bullet Terminal)	1	317 2457	#
63 Thru 65 10-80 (WEW-Has Two Eyelet Terminals)	1	317 0536	
64 10-80 (WEW-Has One Eyelet And One Female Terminal).....	1	317 2479	
ATTACHING PARTS				
Wire To Ignition Switch Terminals				
WASHER, Lock	60 Thru 65 01-10-20-80.....	17.820	4	G131096 NA
NUT, Hexagon.....	60 Thru 65 01: 60 Thru 62 10-20-80: 64 10-80.....	17.412	4	G120614 NA
NUT, Hexagon.....	63 10-80	17.412	4	G271169
3.135 CYLINDER, Ignition Switch Lock (Incl. Keys)(Regular)				
60 Thru 63 01: 60 Thru 62 10-20-80 (Note 3.135-1)	1	447 8584	
64-65 01: 63 10-80 (Note 3.135-1): 64 10-80: 64 15-85 (Taxi)	1	448 0462	
65 10-80.....	1	448 2829	
CYLINDER, Ignition Switch Lock (Incl. Keys)(Special)(Specify Key No.)				
60 Thru 63 01: 60 Thru 62 10-20-80 (Note 3.135-1)	1	447 8585	
64-65 01: 63 10-80 (Note 3.135-1): 64 15-85 (Taxi)	1	448 0463	
65 10-80.....	1	448 2830	
KEY, Ignition Switch Lock Cylinder (Blank)				
60 Thru 65 01-10-20-80: 64 15-85 (Taxi)	23.085	2	344 5763	
KEY, Ignition Switch Lock Cylinder (Coded)(Specify Key No.)				
60 Thru 65 01-10-20-80.....	23.085	2	447 8592	
3.145 SWITCH, Lighting (Headlamps And Instruments)				
60-61 01: 60-61 10-20-80.....	1	320 2495	
62-63 01	1	347 3247	
64 01: 63-64 10-80.....	1	320 4955	
65 01-10-80	1	353 0559	
62 10-80.....	1	346 2107	

NOTE 3.135-1: Special indicates Cylinder is set to match specified Key No.
Regular indicates Cylinder is not set to any specified Key No.