

GROUP NO. — DESCRIPTION — YEAR and MODEL	PRIMARY GROUP NO.	PER CAR	PART NO.	CODE
BLOCK, Double Terminal				
63 Thru 65 10-80.....		2	320 4870	
BLOCK, Triple Terminal				
63 Thru 65 10-80.....		2	320 4871	
3.226 SUPPORT, Ignition Wire				
60-61 01 (LHE): 62 01 (LHE-Note 3.058-1 Type 1)		1	313 9076	
60 Thru 64 10-20-80 (V8)		1	314 9792	
3.228 WIRE SET, Ignition				
60 Thru 63 01 (LHE).....(Replaces 311 4740, 320 2598)(Use 320 4648)		1	320 3485	
60 Thru 65 01-10 (OHV-196)..... (Replaces 320 2418, 311 9187, 320 2599)		1	320 5079	
64-65 01 (LHE)		1	320 4648	
63 Thru 65 10-80 (V8)		1	320 5078	
64 10 (OHVC-232): 65 10-80 (OHV-199)(OHV-232)		1	320 5368	#
60 Thru 62 20-80.....		1	320 2628	
BOOT, Distributor To Spark Plug (Plug End)				
61 Thru 63 01-10 (Six-6 Req.): 60 10 (6 Req.): 60 20-80 (8 Req.)	3.001	AR	313 1614	#
(Straight) 60 01	3.230	5	311 2652	#
(Curved) 60 01	3.001	1	313 1614	#
BOOT, Distributor To Ignition Coil (Coil End)				
60 Thru 65 01-10 (Six-6 Req.): 60 Thru 65 10-20-80 (V8-8 Req.)	3.232	AR	313 1513	#
BOOT, Distributor To Spark Plug (Distributor End)				
60 Thru 63 01-10 (Six-6 Req.): 60 Thru 62 20-80 (8 Req.)	3.230	AR	311 2652	#
3.230 CLIP, Ignition Wire (Metal)				
60-61 01 (LHE): 62 01 (LHE-3.058-1 Type 1)	3.226	2	310 6713	
60 Thru 64 10-20-80 (V8)		4	314 7595	
SEPARATOR, Ignition Wire				
62 Thru 65 01 (LHE-Nylon)...(Less Bracket).....		1	316 6208	
62 Thru 65 01 (LHE-Note 3.058-1 Type 2)...(Incl. Bracket)		1	316 6209	
60 Thru 65 10-20-80 (V8-Nylon)...(Less Bracket)		2	314 6685	
64-65 10-80 (V8)...(Incl. Bracket).....		2	317 5426	
3.232 WIRE, Distributor To Coil High Tension (Copper)				
60 20-80.....		1	315 1702	