

GROUP NO. — DESCRIPTION — YEAR and MODEL	PRIMARY GROUP NO.	PER CAR	PART NO.	CODE
--	-------------------	---------	----------	------

3. 505 HOUSING, Instrument Cluster

60 01 (Note 3. 505-1)	1	320 0844	
60 01 (Note 3. 505-2)	1	320 2370	
61 Thru 63 01	1	320 2530	
64-65 01	1	320 4653	
60-61 10-20-80	1	320 1694	
62 10-80	1	320 3047	
63 10-80: 64 10: 65 10 (RHD)	1	320 3956	
65 10 (Except Marlin)	1	320 5686	
65 50 (Marlin): 65 80	1	320 5491	
64 80	1	320 5016	

GROMMET, Instrument Cluster Housing To Instrument Cluster

62-63 01: 60 Thru 62 10-20-80	2	400 0053	
63-64 10-80: 65 10 (RHD)	1	400 0151	

PLUG, Air And Defroster Controls Opening

64-65 01 (LAC)(Less Heater)	1	350 0720	
63-64 10-80 (Less Heater & Defroster)	1	349 0224	

SEAL, Air And Defroster Controls Opening Light (Polyethylene)

64-65 01 (WAC)(With Heater)	2	320 5439	
-----------------------------	-------	---	----------	--

STUD, Instrument Cluster Heater And A/C Switch Hole

64-65 01 (LAC)(Less Heater)	1	400 0191	
-----------------------------	-------	---	----------	--

CLIP, Instrument Cluster Wire

62-63 01 (RHD): 60-61 10-20-80	1	344 4613	
---------------------------------------	-------	---	----------	--

ATTACHING PARTS

Instrument Cluster Housing To Instrument Panel

SCREW, Tapping..... 61 Thru 63 01	17.660	2	G161895 NA
SCREW, Tapping..... 64-65 01	17.665	2	G168590 NA
SCREW, Tapping..... 63-64 10-80: 65 10 (RHD)	17.666	2	G161670 NA
SCREW, Tapping..... 65 10-80 (LHD)	17.660	2	G161860 NA
SCREW, Machine..... 60 Thru 62 10-20-80	17.598	4	G188749 NA
WASHER, Lock..... 61 Thru 63 01	17.826	2	G178378 NA
NUT, Speed..... 64-65 01	2	400 0895
NUT, Spring..... 63 10-80	17.426	2	G187999 NA

3. 510 BEZEL, Instrument Cluster

60-61 10-20-80 (LHD)	1	344 0543	
62 10-80 (LHD-With Heater)	1	347 5183	
62 10-80 (RHD-With Heater)	1	347 5184	
62 10-80 (LHD-Less Heater)	1	347 5177	
62 10-80 (RHD-Less Heater)	1	347 5178	
(T-342-Upper) 63 10-80 (LHD)... (Incl. Seal)	1	348 8936
(T-342-Upper) 63 10-80 (RHD) ... (Incl. Seal)	1	348 8937

NOTE 3. 505-1: Two Types of Instrument Clusters were used on the 60 01. They can be identified as follows:
 Type 1: Gasoline and Water Temperature Gauges are attached with Screws to Housing.
 Type 2: Gasoline and Water Temperature Gauges are removed by disassembling Instrument Cluster.

NOTE 3. 510-1: Two Types of Instrument Cluster Upper Bezel Assemblies were used on the 63 10-80 Models. They are identified as follows:
 Type 1: Has a smooth shining Finish.
 Type 2: Has a dull Suede Finish.