

## ILLUSTRATIONS INDEX

### GROUP 1 ENGINE

CONNECTING ROD, PISTON, RINGS AND BEARINGS 60 THRU CURRENT ALL MODELS .....	IL 1 - 17
CRANKSHAFT AND CAMSHAFT 60 THRU CURRENT 01: 60 THRU CURRENT 10 (OHV-196).....	IL 1 - 11
CRANKSHAFT AND CAMSHAFT 64 10 (OHV-232): 65 ALL MODELS (OHV-232): 65 10 (OHV-199) .	IL 1 - 29
CRANKSHAFT AND CAMSHAFT 60 THRU CURRENT 10-20-80 (V8).....	IL 1 - 12
ENGINE CYLINDER BLOCK 60 THRU CURRENT 01 (LHE).....	IL 1 - 7
ENGINE CYLINDER BLOCK 60 THRU CURRENT 01 (OHV-196): 60 THRU 64 10 (OHVC-196) ....	IL 1 - 8
ENGINE CYLINDER BLOCK 61 THRU 64 10 (OHVA) .....	IL 1 - 9
ENGINE CYLINDER BLOCK 64 10 (OHV-232): 65 ALL MODELS (OHV-232): 65 10 (OHV-199).....	IL 1 - 23
ENGINE CYLINDER BLOCK 60 THRU CURRENT 10-20-80 (V8) .....	IL 1 - 10
ENGINE CYLINDER HEAD 60 THRU 64 01-10 (OHV-196): 65 01 (OHV-196) .....	IL 1 - 13
ENGINE CYLINDER HEAD 64 10 (OHV-232): 65 ALL MODELS (OHV-232): 65 10 (OHV-199) .....	IL 1 - 24
ENGINE CYLINDER HEAD 60 THRU CURRENT 10-20-80 (V8).....	IL 1 - 14
ENGINE FRONT SUPPORT 60 THRU 62 10 .....	IL 1 - 3
ENGINE FRONT SUPPORT 60 THRU 62 20-80.....	IL 1 - 3
ENGINE FRONT AND REAR SUPPORT 60 THRU 63 01 .....	IL 1 - 1
ENGINE FRONT AND REAR SUPPORT 64-65 01 (LHE)(OHV-196) .....	IL 1 - 2
ENGINE FRONT AND REAR SUPPORT 63-64 10 (OHV-196) .....	IL 1 - 5
ENGINE FRONT AND REAR SUPPORTS 64 10 (OHV-232): 65 ALL MODELS (OHV-232): 65 10 (OHV-199) .....	IL 1 - 28
ENGINE FRONT AND REAR SUPPORT 63-64 10-80 (V8).....	IL 1 - 6
ENGINE FRONT AND REAR SUPPORT 65 10-80 (V8).....	IL 1 - 31
ENGINE OIL FILTER 60 THRU 64 01 (LHE) .....	IL 1 - 21
ENGINE OIL FILTER 60 THRU 63 01-10 (OHVC) .....	IL 1 - 21
ENGINE OIL FILTER 64 01-10 (OHVC-196) .....	IL 1 - 22
ENGINE OIL FILTER 64 10 (OHV-232): 65 ALL MODELS (OHV-232): 65 10 (OHV-199).....	IL 1 - 27
ENGINE OIL FILTER 60 THRU CURRENT 10-20-80 (V8) .....	IL 1 - 22
ENGINE OIL PUMP 60 THRU CURRENT 10-20-80 (V8) .....	IL 1 - 20
ENGINE OIL PUMP 62 THRU 64 01: 62 THRU 64 10 (OHVC-196) .....	IL 1 - 18
ENGINE OIL PUMP 64 10 (OHV-232): 65 ALL MODELS (OHV-232): 65 10 (OHV-199) .....	IL 1 - 26
ENGINE OIL PUMP AND FILTER 61 THRU 64 10 (OHVA).....	IL 1 - 19
ENGINE OIL PUMP AND FILTER 65 01 (LHE)(OHV-196).....	IL 1 - 30
ENGINE REAR SUPPORT 60 THRU 62 10.....	IL 1 - 4
ENGINE REAR SUPPORT 60 THRU 62 20-80.....	IL 1 - 4
INTAKE AND EXHAUST MANIFOLD 60 THRU 64 10 (OHV-196): 60 THRU 65 01 (OHV-196).....	IL 1 - 15
INTAKE AND EXHAUST MANIFOLD 64 10 (OHV-232): 65 ALL MODELS (OHV-232): 65 10 (OHV-199).....	IL 1 - 25
INTAKE AND EXHAUST MANIFOLD 60 THRU CURRENT 10-20-80 (V8) .....	IL 1 - 16
WATER HEATED INTAKE AND EXHAUST MANIFOLD 60 Thru 65 01 (OHV-196-LDT).....	IL 1 - 32

### GROUP 2 COOLING - GRILLE

ENGINE COOLING SYSTEM 60 01-10.....	IL 2 - 1
ENGINE COOLING SYSTEM 61-62 01-10 .....	IL 2 - 2
ENGINE COOLING SYSTEM 60 THRU 62 20-80 .....	IL 2 - 3
ENGINE COOLING SYSTEM 64-65 01 (LHE)(OHV-196) .....	IL 2 - 4
ENGINE COOLING SYSTEM 65 01 (OHV-232).....	IL 2 - 17
ENGINE COOLING SYSTEM 64 10 (OHV-196) .....	IL 2 - 5
ENGINE COOLING SYSTEM 65 10-80 (OHV-232).....	IL 2 - 15
ENGINE COOLING SYSTEM 65 10-80 (V8) .....	IL 2 - 16
ENGINE COOLING SYSTEM 64 10-80 (V8).....	IL 2 - 6
GRILLE AND GRILLE PANEL 63 01.....	IL 2 - 10
GRILLE AND GRILLE PANEL 63 10-80 .....	IL 2 - 11
GRILLE AND GRILLE PANEL 64 01.....	IL 2 - 7
GRILLE AND GRILLE PANEL 65 01.....	IL 2 - 12
GRILLE AND GRILLE PANEL 65 10.....	IL 2 - 13
GRILLE AND GRILLE PANEL 65 80.....	IL 2 - 14
GRILLE AND GRILLE PANEL 64 10-80 .....	IL 2 - 8
GRILLE MOULDINGS 65 10.....	IL 2 - 9
GRILLE PANEL MOULDINGS 64-65 01 (220) .....	IL 2 - 9
GRILLE PANEL MOULDINGS 64-65 01 (330)(440)(440-H).....	IL 2 - 9

### GROUP 3 ELECTRICAL - INSTRUMENT CLUSTER

ALTERNATOR FAN, PULLEY AND MOUNTING (MOTOROLA) 63-64 01-10 (OHV-196): 65 01 (OHV-196) .....	IL 3 - 18
--	-----------