

## ILLUSTRATIONS INDEX

### GROUP 4 FUEL - EXHAUST (Continued)

HAND THROTTLE CONTROL 63-64 10 (SIX-FLEET SALES) .....	IL 4 - 39
HAND THROTTLE CONTROL 63-64 10-80 (V8-FLEET SALES) .....	IL 4 - 40
HAND THROTTLE CONTROL 65 10-80 (V8-FLEET SALES) .....	IL 4 - 41

### GROUP 5 CLUTCH - E-STICK

CLUTCH AND BRAKE PEDAL LINKAGE 60 01 (WST)(WOD) .....	IL 5 - 4
CLUTCH COVER AND HOUSING 60 THRU CURRENT ALL MODELS (LES-WST)(LES-WOD) .....	IL 5 - 1
CLUTCH COVER AND HOUSING 62 THRU 64 01-10 (WES-WST)(WES-WOD) .....	IL 5 - 2
CLUTCH LINKAGE 60 01 (WST)(WOD) .....	IL 5 - 3
CLUTCH LINKAGE 61 THRU 63 ALL MODELS (LHD-LES-WST)(LHD-LES-WOD) .....	IL 5 - 5
CLUTCH PEDAL AND LINKAGE 64-65 01 (LHD-WST)(LHD-WOD) .....	IL 5 - 6
CLUTCH PEDAL AND LINKAGE 64-65 10 (LHD-196) .....	IL 5 - 7
CLUTCH PEDAL AND LINKAGE 64-65 10 (OHV-232-WST)(OHV-232-WOD): 64-65 10-80 (V8-WST) (V8-WOD) .....	IL 5 - 8
E-STICK TOW START 62 01 (WST)(WOD) .....	IL 5 - 12
E-STICK TOW START 63 01 (WST)(WOD): 63-64 10 (WST)(WOD) .....	IL 5 - 13
E-STICK TOW START 64 01 (WST)(WOD) .....	IL 5 - 14
E-STICK VALVE, SERVO AND SWITCH 62 01 (WST)(WOD) .....	IL 5 - 9
E-STICK VALVE, SERVO AND SWITCH 63 01-10 (1st TYPE)(WST)(WOD) .....	IL 5 - 10
E-STICK VALVE, SERVO AND SWITCH 63 01-10 (2nd TYPE)(WST)(WOD): 64 01-10 (WST)(WOD) ..	IL 5 - 11

### GROUP 6 STANDARD - OVERDRIVE TRANSMISSION

OVERDRIVE 60 THRU CURRENT ALL MODELS .....	IL 6 - 8
OVERDRIVE ELECTRICAL ACTUATING SYSTEM 60 THRU 63 ALL MODELS .....	IL 6 - 9
TRANSMISSION 60 THRU 63 01 (WST) .....	IL 6 - 1
TRANSMISSION 64-65 01 (WST) .....	IL 6 - 2
TRANSMISSION 60 THRU CURRENT 10 (196-WST) .....	IL 6 - 4
TRANSMISSION 64-65 (OHV-232-WST): 65 80 (OHV-232-WST) .....	IL 6 - 7
TRANSMISSION 63 10 (V8-WST): 64 10 (1st TYPE-V8-WST) .....	IL 6 - 5
TRANSMISSION 64 10 (2nd TYPE-V8-WST): 65 10 (V8-WST) .....	IL 6 - 10
TRANSMISSION 60 THRU CURRENT 80 (WST) .....	IL 6 - 6

### GROUP 7 SHIFTING

COLUMN GEAR SHIFT LINKAGE (LOWER) 60 01 (WST)(WOD) .....	IL 7 - 13
COLUMN GEAR SHIFT LINKAGE (UPPER) 60 01 (WST)(WOD) .....	IL 7 - 13
COLUMN GEAR SHIFT LINKAGE 60 01 (WAT) .....	IL 7 - 14
COLUMN GEAR SHIFT SHAFT AND STEERING TUBE 61 THRU 63 01 .....	IL 7 - 15
COLUMN GEAR SHIFT SHAFT AND STEERING TUBE 60 THRU 62 10-80 (WST)(WOD) .....	IL 7 - 16
COLUMN GEAR SHIFT SHAFT AND STEERING TUBE 63 10-80 (WAT) .....	IL 7 - 17
COLUMN GEAR SHIFT SHAFT AND STEERING TUBE 63-64 10 (WES-LAW): 63-64 10-80 (WST-LAW)(WOD-LAW) .....	IL 7 - 3
COLUMN GEAR SHIFT SHAFT AND STEERING TUBE 64 01 (LHD-WST-LES)(LHD-WOD-LES) ..	IL 7 - 5
COLUMN GEAR SHIFT SHAFT AND STEERING TUBE 64 10-80 (LHD-WAT-LAW) .....	IL 7 - 4
COLUMN GEAR SHIFT SHAFT AND STEERING TUBE 64-65 10-80 (WAT-WAW) .....	IL 7 - 1
COLUMN GEAR SHIFT SHAFT AND STEERING TUBE 65 01 (WST)(WOD) .....	IL 7 - 7
COLUMN GEAR SHIFT SHAFT AND STEERING TUBE 65 01 (WAT) .....	IL 7 - 8
COLUMN GEAR SHIFT SHAFT AND STEERING TUBE 65 10-80 (WST-LAW)(WOD-LAW) .....	IL 7 - 9
COLUMN GEAR SHIFT SHAFT AND STEERING TUBE 65 10-80 (LHD-WAT-LAW) .....	IL 7 - 10
FLOOR GEAR SHIFT 63 THRU CURRENT ALL MODELS (WOD) .....	IL 7 - 12
FLOOR GEAR SHIFT 64-65 10-80 (V8-WAT) .....	IL 7 - 2
FLOOR GEAR SHIFT 65 10-80 (V8-W4ST) .....	IL 7 - 11
PUSH BUTTON SHIFTING 60 THRU 62 10-80 (WAT) .....	IL 7 - 18
TRANSMISSION GEAR SELECTOR CABLE 63 THRU CURRENT 10 (RHD-WAT) .....	IL 7 - 6

### GROUP 8 BRAKES - WHEELS

BRAKE LINES AND ATTACHING PARTS 60-61 01 .....	IL 8 - 26
BRAKE LINES AND ATTACHING PARTS 60-61 10-20-80 .....	IL 8 - 27
BRAKE LINES AND ATTACHING PARTS 64-65 01 .....	IL 8 - 13
BRAKE LINES AND ATTACHING PARTS 63-64 10-80 (LDB) .....	IL 8 - 14
BRAKE MASTER CYLINDER 60-61 ALL MODELS (LPB) .....	IL 8 - 8
BRAKE MASTER CYLINDER (DELCO-MORAIN) 62 ALL MODELS (LHD-LPB) .....	IL 8 - 9