

ILLUSTRATIONS INDEX

GROUP 13 HEATER - AIR CONDITIONING (Continued)

HEATER 60 01 (LHE)(FIRST TYPE)	FIG. 13.001 - 1
HEATER AND BLOWER HOUSING 63-64 10-80	FIG. 13.001 - 7
HEATER 62 10-80.....	FIG. 13.001 - 6
HEATER 63 10-80.....	FIG. 13.001 - 7
HEATER 61 10-20-80.....	FIG. 13.001 - 5
HEATER 64-65 01	IL 13 - 1
HEATER AND AIR CONDITIONING BLOWER HOUSING 63 THRU CURRENT 10-80 (WAC)	FIG. 13.072 - 1
HEATER AND BLOWER HOUSINGS 65 10-80	IL 13 - 7
HEATER AND FRESH AIR INTAKE 61 THRU 63 01.....	FIG. 13.001 - 2
HEATER CONTROLS 60 10-20-80.....	FIG. 13.001 - 3
HEATER CONTROLS 65 10-80 (LAC)	IL 13 - 8
HEATER AND AIR CONDITIONING CONTROLS 65 10-80 (WAC).....	IL 13 - 9
HEATER CORE HOUSING 63 THRU CURRENT 10-80 (WAC).....	FIG. 13.028 - 3
HEATER DUCTS, CORE AND COVER 60 10-20-80.....	FIG. 13.001 - 4

GROUP 14 CHASSIS MISCELLANEOUS

BUMPER JACK 63 ALL MODELS; 64-65 ALL MODELS (1st TYPE).....	IL 14 - 1
BUMPER JACK 64-65 ALL MODELS (2nd TYPE)	IL 14 - 1

GROUP 15 ACCESSORIES

A. M. RADIO 64 10-80.....	IL 15 - 3
GASOLINE FILTER 60 THRU CURRENT ALL MODELS.....	IL 15 - 1
MANUAL ANTENNA 60-61 01-10-20-80	FIG. 15.030 - 4
MANUAL ANTENNA 64-65 01; 63 THRU 65 10-80.....	IL 15 - 8
OUTSIDE REAR VIEW MIRROR 60 01	FIG. 15.270 - 1
OUTSIDE REAR VIEW MIRROR 60 10-20-80	FIG. 15.270 - 3
REAR DECK ANTENNA 60-61 10-20-80	FIG. 15.030 - 3
DUO-COUSTIC REAR SHELF SPEAKER 64-65 15-16-19-85-89 (EXCEPT MARLIN)	IL 15 - 4
REMOTE CONTROL MIRROR ASSEMBLY 64 ALL MODELS	IL 15 - 6
SEAT BELT PACKAGE 60-61 10-20-80.....	FIG. 15.365 - 3
SEAT BELT 64-65 ALL MODELS.....	IL 15 - 7
SPOTLIGHT 63 10-80; 64 ALL MODELS.....	IL 15 - 2
VIBRA-TONE REAR SHELF SPEAKER 64-65 15-16-19-85-89 (EXCEPT MARLIN)	IL 15 - 5
WINDSHIELD WASHER 60 THRU 63 01; 60 10-20-80; 62 80.....	FIG. 15.440 - 1
WIRE WHEEL COVER KIT 64-65 ALL MODELS.....	IL 15 - 6

GROUP 16 AUTOMATIC TRANSMISSION

CONVERTER AND HOUSING 60 THRU CURRENT ALL MODELS	IL 16 - 3
FRONT PUMP, CLUTCHES AND CARRIER 62 THRU CURRENT ALL MODELS.....	IL 16 - 7
FRONT SERVO AND BAND 60 THRU CURRENT ALL MODELS	IL 16 - 4
LOWER VALVE BODY 60-61 01-10.....	IL 16 - 11
LOWER VALVE BODY 60-61 20-80.....	IL 16 - 12
OIL COOLER TUBES 60 THRU CURRENT 10-80 (V8)	IL 16 - 15
PARKING LOCK AND MANUAL CONTROL 60-61 01	IL 16 - 8
PARKING LOCK AND MANUAL CONTROL 60-61 10-20-80.....	IL 16 - 9
PARKING LOCK AND MANUAL CONTROL 62 THRU CURRENT ALL MODELS	IL 16 - 10
PRESSURE REGULATOR VALVE 60-61 01-10 (SIX); 60 THRU CURRENT 10-20-80 (V8)	IL 16 - 2
REAR SERVO 60-61 ALL MODELS	IL 16 - 5
REAR SERVO AND BAND 62 THRU 64 01-10 (SIX-1st. TYPE); 62 THRU CURRENT 10-80 (V8) ...	IL 16 - 6
REAR SERVO AND BAND 62 THRU 64 01-10 (SIX-2nd. TYPE); 65 01-10-80 (SIX)	IL 16 - 6
SOLENOID 60-61 01-10-20; 60 THRU 64 10-80 (V8)	IL 16 - 16
THROTTLE CONTROL CABLE 64-65 01 (LHE)	IL 16 - 20
THROTTLE CONTROL CABLE 64-65 ALL MODELS (OHV-SIX)	IL 16 - 21
THROTTLE CONTROL CABLE 65 10-80 (V8)	IL 16 - 22
TRANSMISSION CASE, REAR PUMP AND RETAINER 60 THRU CURRENT ALL MODELS	IL 16 - 1
UPPER VALVE BODY 60-61 01-10.....	IL 16 - 11
UPPER VALVE BODY 60-61 20-80.....	IL 16 - 12
VALVE ASSEMBLY 62-63 01-10 (SIX)	IL 16 - 13
VALVE ASSEMBLY 62 THRU 64 10-80 (V8-WCGS).....	IL 16 - 14